


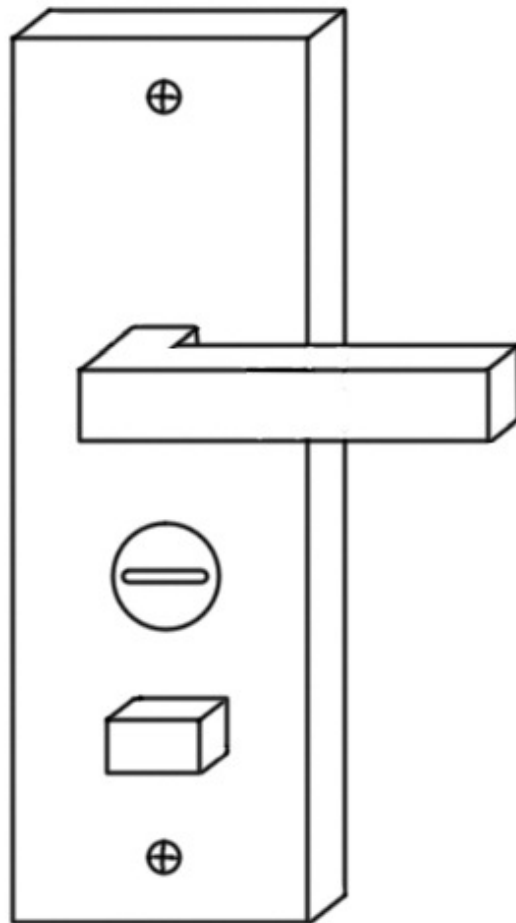

Replace the security door lock cylinder

Simple replacement of several home security door lock cylinder.

Written By: Z.Heng



By Z.Heng

INTRODUCTION


According to this guide can easily replace the home security door lock cylinder.



TOOLS:


- [Phillips screwdriver](#) (1)
 - [Metal pry bar](#) (1)
-

Step 1 — Remove the screws that secure the handle

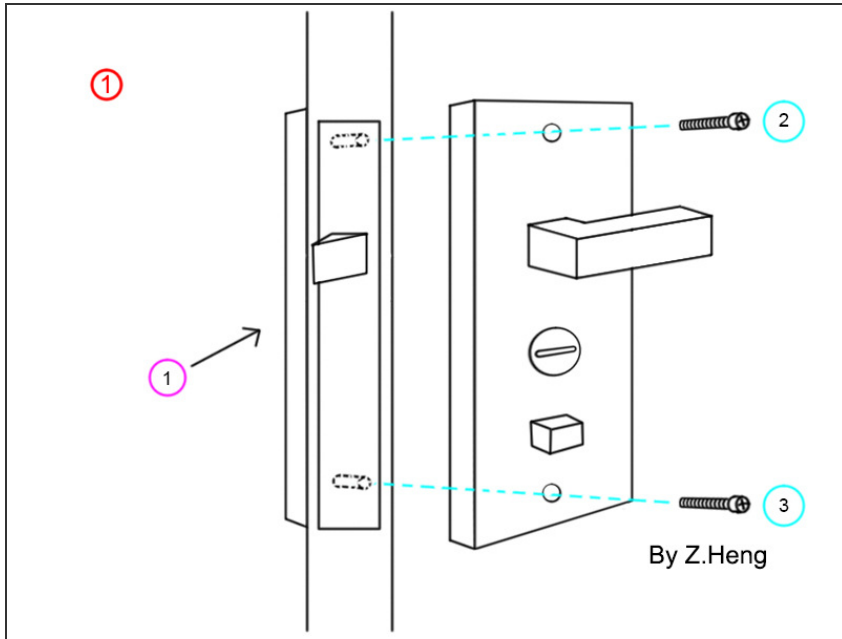


- It is recommended that two people work together, one person in the outer side of the outer handle, one person on the other side of the removal of screws.
- Remove the two screws.

Step 2 — Remove the handle

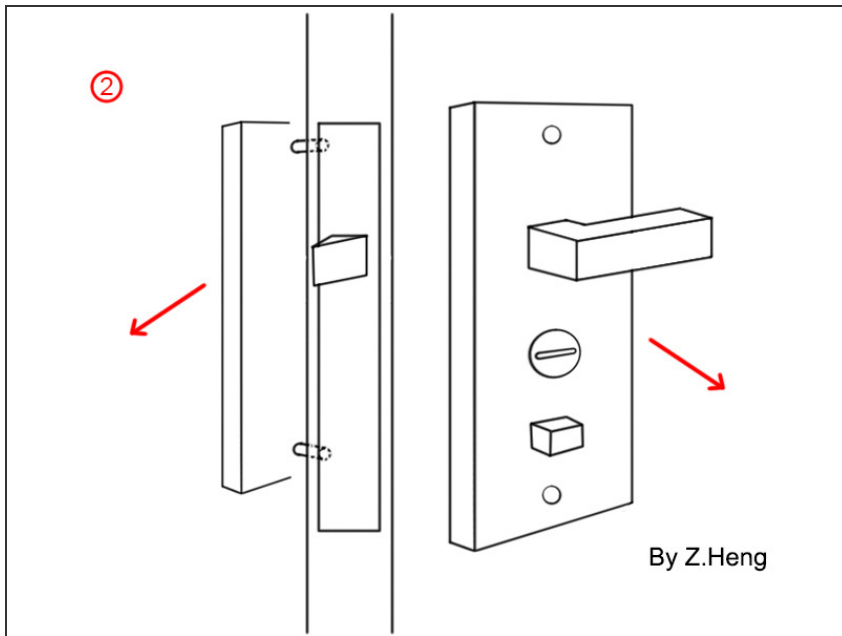


- Use the pry bar to pry around carefully to remove the door handles on both sides.
- ⚠ Usually there will be a plastic gasket between the handle and the door, careful not to damage it.
- ⚠ There will be a metal square shaft between the handles. Remove the inner handle when you are careful not to lose it, because the axis is divided inside and outside.

Step 3 — Note the square axis

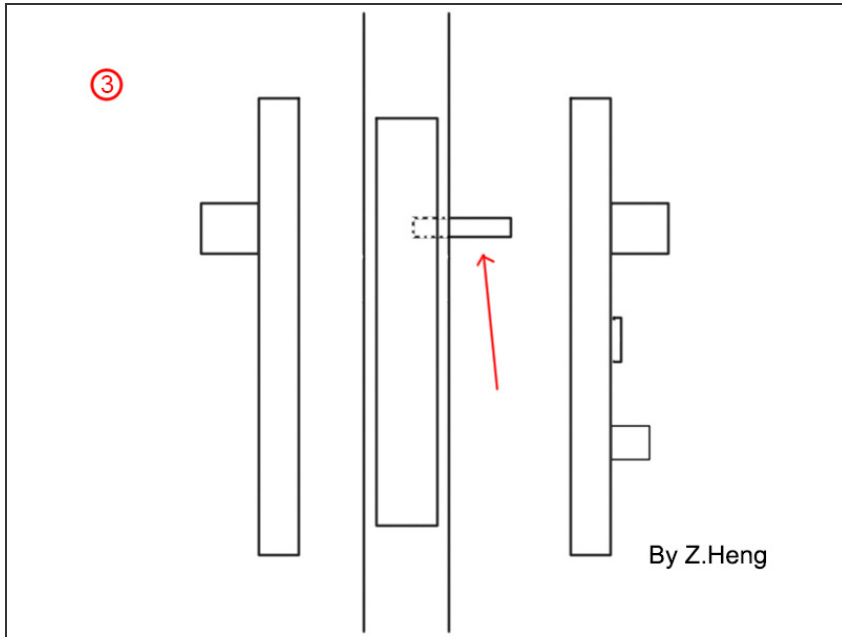

! Note the direction of installation of this square shaft. Do not get rid of the handle when you remove the handle.

Step 4 — Removing the cylinder

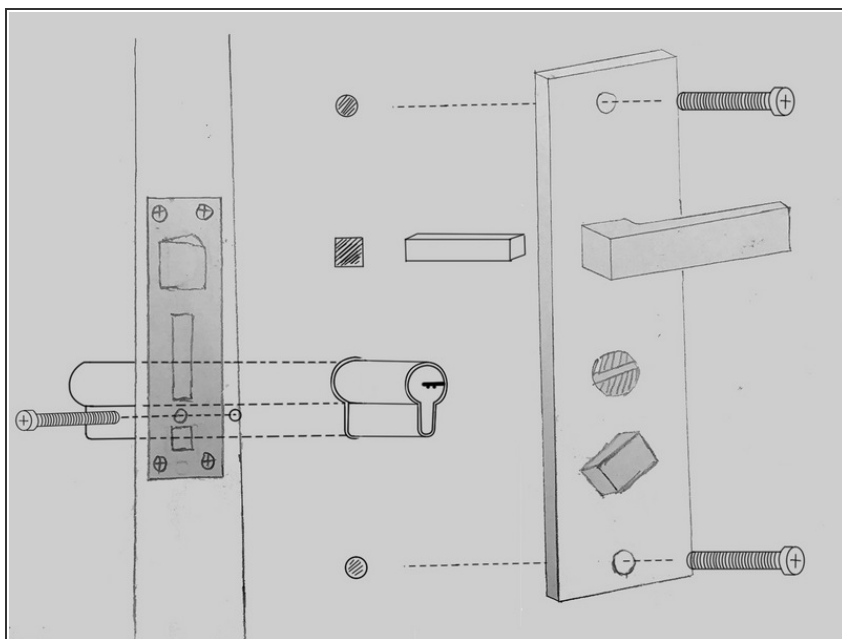

- Remove the screw cylinder.
- The cylinder is introduced to the side of the door, which side which side is easy to push.

! Note that there are different types and cylinder mounting direction. If you are replacing the lock cylinder, the cylinder observe your side, there is a rotating rod black, some are in the middle of the cylinder, some locations sidelined.

请按照本指南的相反顺序重新安装。